


# OWNER'S MANUAL 3-4 and 4-5 Person Cedar Elite Premium Saunas

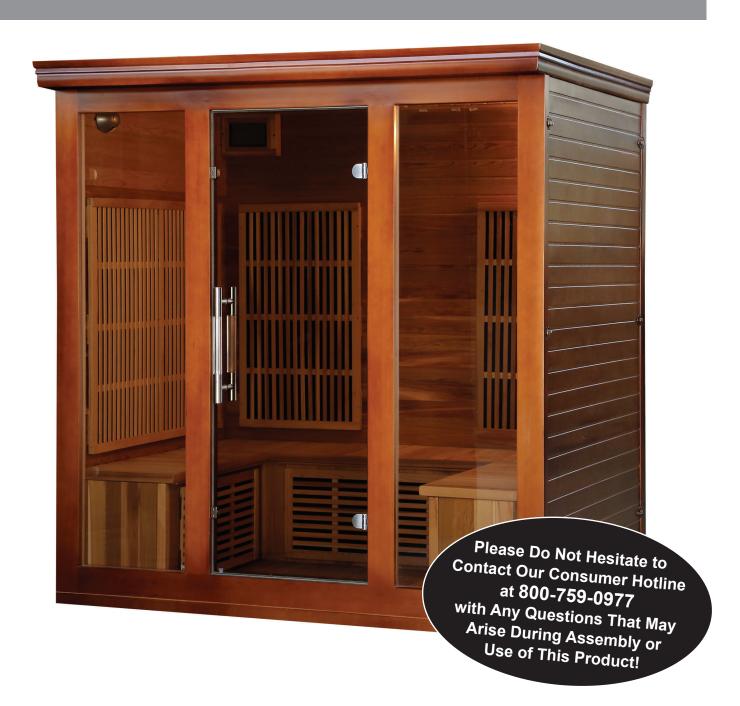

Rev. 04/20 SA1315/SA1322

# **TABLE OF CONTENTS**

ASSEMBLY TIPS & WARNINGS	3
PARTS IDENTIFIER	4
ASSEMBLY INSTRUCTIONS	5-9
BACKREST ASSEMBLY INSTRUCTIONS	10
OPERATION INSTRUCTIONS	11
ENJOYING YOUR SAUNA	12
HEALTH & SAFETY WARNINGS	13
CLEANING & MAINTANENCE	14
TROUBLESHOOTING GUIDE	14-15
SAUNA USE DISCLAIMER	15
REPLACEMENT PARTS	16-18
WARRANTY INFORMATION	19

If you would like a French version of this manual, please contact our Customer Service Department at 800-759-0977 or custserv@splashnetxpress.com

Si vous voulez une version française d'un manuel, s'il vous plaît contacter notre service à la clientèle au 800-759-0977 ou custserv@splashnetx

# **ASSEMBLY TIPS & WARNINGS**

- Before you begin, read all assembly instructions and safety warnings carefully.
- This sauna requires at least 2 adults to complete assembly.



- Remove all of the contents from boxes and verify that you have all of the parts shown on the Parts Identifier before you begin assembly. *Note: Some parts may be pre-installed or pre-assembled.*
- This manual is used for the assembly of several sauna models; therefore, some figures or drawings may not look exactly like your product.
- Cover the sauna floor during assembly to avoid staining the unfinished wood surface.
- Retain this Owner's Manual for future reference.


### **ELECTRICAL REQUIREMENTS**

- We recommend consulting a licensed electrician and checking local ordinances before installing ANY sauna.
- These saunas require a 20 amp receptacle and a 20 amp circuit breaker. *Note: Electrical modifications may be required to accommodate 20 amp power.*
- Refer to the serial plate on the back of the sauna for complete electrical specifications.
- These saunas requires a dedicated circuit No other appliances should share the same outlet with the sauna.

### **CHOOSING A LOCATION**

- This sauna should only be placed INDOORS on a dry, level surface.
- There should be a minimum of 5 inches clearance between the sauna and any wall.
- Make sure the main power cord will reach the outlet and remains easy to access.
- The sauna should only be used in a dry location as moisture will damage the wood and electrical components.
- Keep the sauna away from any potential hazards including water sources, flammable objects and combustible materials.

# PARTS IDENTIFIER (NOT TO SCALE)

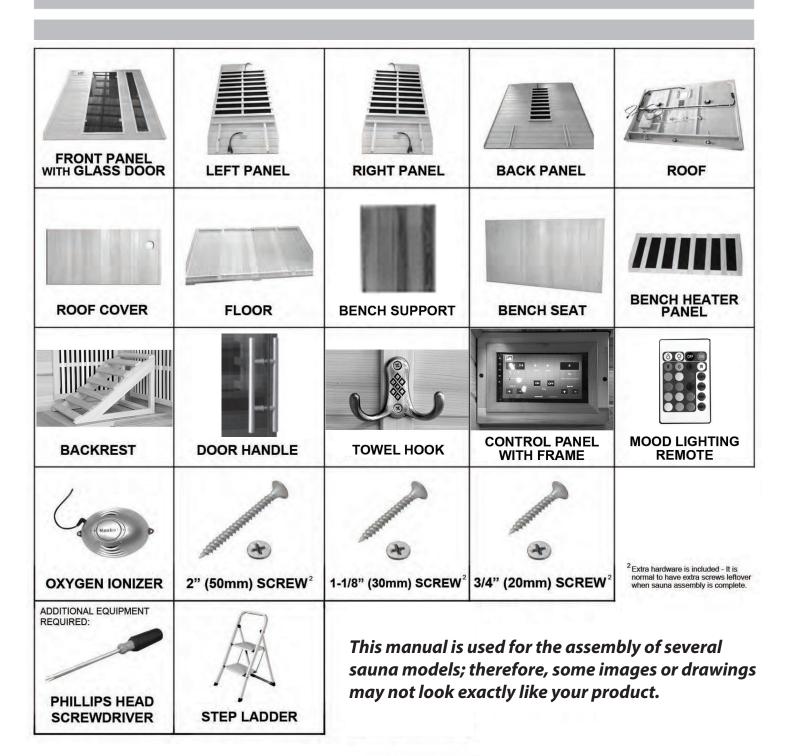

The parts identified above, unless otherwise indicated, are the main components used for assembly.

Other pre-assembled parts are listed on PAGE 15 and 16.

Refer to REPLACEMENT PARTS (PAGE 15-17) to determine the correct part number when ordering replacements.

# **ASSEMBLY INSTRUCTIONS**

1. Begin assembly by determining an appropriate location for your sauna – see ASSEMBLY TIPS & WARNINGS for details. Place the FLOOR PANEL on the floor in this location.



2. Place the BACK PANEL on the FLOOR PANEL, lining up the BACK PANEL against the floor trim piece on the backside of the FLOOR.



3. Place the RIGHT PANEL on the FLOOR in the same manner and buckle it to the BACK PANEL.



NOTE: make sure all panels fit together snugly, with side wall end fitting in groove and outer trim overlapping wall, when buckling panels.



4. Place the LEFT PANEL on the FLOOR in the same manner and buckle it to the BACK PANEL.




5. Slide the BENCH SUPPORT HEATER PANEL (LONG) into place between the two SIDE PANELS Connect the heater plug. *Note: It may be necessary to move a side wall out slightly to do this.* 



6. Place the two BENCH SUPPORT HEATER PANELS (SHORT) into place, one on each side, against the back SUPPORT HEATER PANEL. Connect the heater plugs.



7. Attach two FRONT SIDE BENCH SUPPORTS to BENCH SUPPORT HEATER PANELS (SHORT) with 2" SCREWS. Attach each BENCH SEAT with 2" SCREWS.

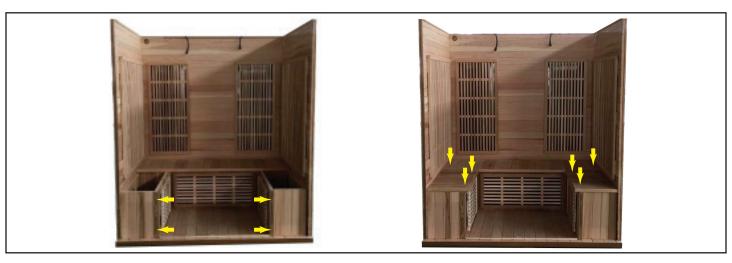

8. Place the FRONT PANEL on front lip of the FLOOR and buckle it to the SIDE PANELS.



9. Lift the ROOF above the sauna, feeding the control panel and heater cables through the corresponding holes. Secure the ROOF to the sauna with 1-1/8" SCREWS. Connect the control panel wires, mood lighting, and heater plugs on the roof to the corresponding wire connections coming up through walls and control panel roof hole.





10. Feed the main power cable through hole in ROOF and plug securely into receptacle on back of POWER SUPPLY box . Secure the ROOF COVER with 3/4" SCREWS.




11. Connect touch screen control panel as shown and mount frame to BACK PANEL with 2" SCREWS.





NOTE: Please see info on Page 11 about USB cable usage. This is the extra black wire, with USB connection on end, coming out of back of the Control Panel. This is NOT used to connect Control Panel and, if not using, can be tucked behind panel out of way.

12. Attach the DOOR HANDLE to the GLASS DOOR by assembling parts (A) as shown (for top and bottom of handle, note position of glass door between parts), then inserting set screws (B) into handle and screwing into fitting (C).

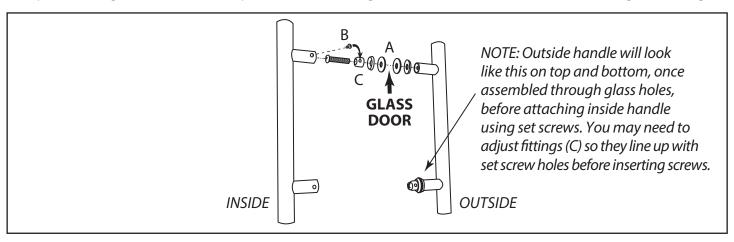

13. Remove the back cover of the OXYGEN IONIZER by turning it as indicated. Unwrap and install the fragrance patch, then reattach the back cover. Attach the OXYGEN IONIZER in the designated position with 3/4" SCREWS. Plug the power cable into the OXYGEN IONIZER.



- 14. Attach the DOUBLE TOWEL HOOK with 3/4" SCREWS. *Note: attaching hook is optional, but if you do, consider the position carefully before driving any screws into the sauna interior.*
- 15. Plug the main power cable into a dedicated outlet. *Note: No other appliances should share the same outlet or circuit with this sauna.*

# **CONGRATULATIONS!**


The assembly of your sauna is now complete.

Please review the Operation Instructions and Health & Safety warnings before using your sauna.


To ensure years of trouble-free use, follow the Cleaning & Maintenance guidelines carefully.

# SA1315/SA1322 BACKREST - SAP2818 Assembly Instructions / Instructions d'assemblage

Images Not to Scale/Ilustrations non à l'échelle

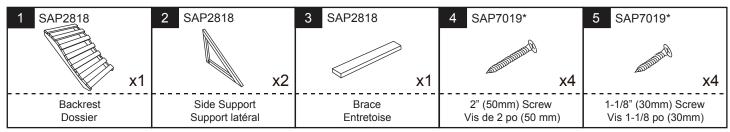


\*Items included in Hardware Pack, SAP7019 \*Pièces incluses dans la trousse de quincaillerie, SAP7019

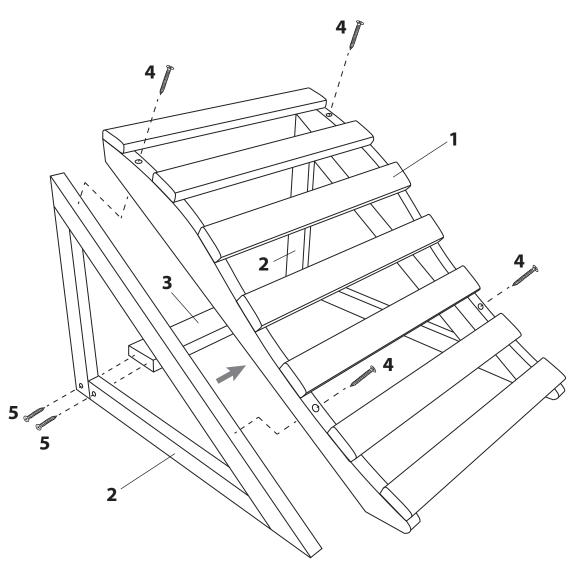

NOTE: Two 2-3/4" (70mm) Screws are included with sauna in separate bag for installation of control panel. These replace 2" screws indicated in manual.

REMARQUE: Deux vis de 2-3 / 4 "(70mm) sont incluses avec un sauna dans un sac séparé pour l'installation du panneau de commande. Ceux-ci remplacent les vis 2 po indiquées dans le manuel.

# **OPERATION INSTRUCTIONS**

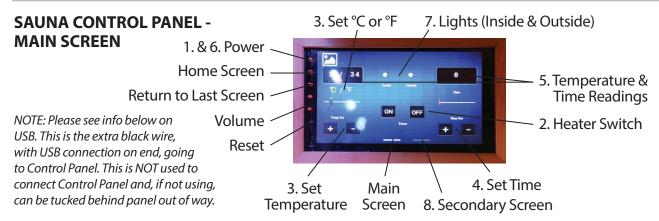

- 1. Press POWER to turn ON Control Panel. This will open Main Screen.
- 2. Press center Heater Switch to turn Sauna Heater Panels ON or OFF.
- 3. Select °C or °F and set the desired TEMPERATURE with the (+) and (-) buttons.
- 4. Set the desired TIME with the (+) and (-) buttons.
- 5. When the TIME reaches 00, the heaters will turn OFF automatically.
- 6. After your sauna session, press POWER to turn OFF the sauna.
- 7. Press INSIDE or OUTSIDE to turn ON or OFF the corresponding light.
- 8. Use bottom right button to get to SECOND SCREEN for music and color therapy light controls.

### **SECONDARY SCREEN -** Use button to select function

### **COLOR THERAPY CONTROL PANEL**

(use LED COLOR button to reach controls)

- 1. Press ON or OFF in top white bar.
- 2. Press cycled color, or individual color desired, using color buttons.
- 3. Use dimer switch to control brightness.
- 4. Cycle switch can be used to go through colors and select. 3. Dimer Switch -





**TUNER** - Use buttons to select AM and FM radio signal (FM1, FM2, FM3, AM1 or AM2), scroll through channels (<>), or auto seek (AMS). Channels can be saved in P1- P6.

**BLUETOOTH** - Use touch controls to select and play music once connected to source.

**USB** - Can be used with thumb drive *only*. Will **NOT** activate with any other input. Best to use Bluetooth for music. **CALENDAR** - Use arrow buttons on right side of screen to set date and time, then press SAVE.

### **INTERIOR MOOD LIGHTING** (this is NOT Color Therapy Light, see above)

1. Use the remote control to make adjustments to interior light color and intensity.

### **OXYGEN IONIZER**

Interior Mood Lighting can be controlled by this remote > ONLY, NOT control panel.

1. Press ION to release negatively charged ions to purify the air.





2. Press O3 to disinfect the air with ozone.

# **ENJOYING YOUR SAUNA**

- 1. Prior to initial use, wipe down all interior surfaces of the sauna with a damp cloth.
- 2. Turn on the sauna and set temperature to 104° F for one hour to burn off any factory dust.
- 3. Always drink plenty of water before, during and after your sauna session to stay properly hydrated.
- 4. A normal sauna session should last 30 minutes or less.
- 5. Allow approximately 20 to 30 minutes for the sauna to warm up before entering.
- 6. Perspiration will begin within 15 to 25 minutes after entering the sauna.
- 7. Limit the use of lotions or oils on your body while using your sauna. These products can block your pores and limit perspiration, decreasing the effectiveness of your sauna session.
- 8. For spot treatment of a particular area, position that body part closer to the heater, allowing for deeper heating in that area.
- 9. During your sauna session, place towels on the bench seats and on the floor to absorb perspiration and maintain the cleanliness of your sauna.
- 10. Towel off excess perspiration during your sauna session to help your body perspire more freely.
- 11. Open the ceiling vent or the front door to allow fresh air into your sauna.
- 12. Allow your body to cool down following your sauna session, then rinse the perspiration off your body in a warm shower.

# **HEALTH & SAFETY WARNINGS**

- 1. Review all instructions and warnings before operating your sauna. A sauna is not a toy. Serious injury may result from negligence, intentional misuse and failure to follow safety instructions.
- 2. Hyperthermia Danger: Hyperthermia occurs when the body absorbs more heat than it can dissipate. When the elevated body temperatures are sufficiently high, hyperthermia is a medical emergency and requires immediate treatment to prevent disability or death. It is very important not to allow your body's core temperature to rise above 103° F. Symptoms of hyperthermia include dizziness, lethargy, drowsiness and fainting. The effects of hyperthermia may include failure to perceive heat, failure to recognize the need to exit the sauna, unawareness of the impending health hazard, physical inability to exit the sauna and unconsciousness.
- 3. If you are feeling uncomfortable, faint or dizzy, exit the sauna immediately.
- 4. Do not exceed recommended time and temperature guidelines.
- 5. Do not touch or interfere with the temperature sensor on the control panel.
- 6. Do not touch or spray water on the heater elements.
- 7. Do not use the sauna while under the influence of drugs or alcohol.
- 8. Do not sleep inside the sauna.
- 9. Do not use the sauna immediately following strenuous exercise. Allow your body to cool down for 30 minutes before entering the sauna.
- 10. Pets should never be placed in the sauna.
- 11. Pregnant women, children under the age of 6, the elderly and infirm should not use the sauna.
- 12. Children over the age of 6 should always be supervised by an adult.
- 13. People with health problems including open wounds, fever, sunburn or dehydration should not use the sauna.
- 14. People suffering from obesity or with a history of heart disease, low or high blood pressure, circulatory system problems or diabetes should consult a physician before using the sauna.
- 15. Consult a physician before using the sauna if you take any prescription medications.
- 16. Keep towels and combustible materials away from the heater elements.
- 17. Remove all towels and materials after your sauna session.
- 18. Never leave your sauna unattended while in use.
- 19. Always unplug the sauna and allow it to cool down before performing any cleaning or maintenance.
- 20. Always turn off and unplug the sauna when not in use.

# **CLEANING & MAINTENANCE**

- 1. Always unplug the sauna and allow it to cool down before performing any cleaning or maintenance.
- 2. Use furniture polish or furniture oil when cleaning the sauna exterior.
- 3. The sauna interior surfaces should only be wiped down with a damp cloth. Do NOT use chemicals, abrasive cleaners or solvents on the unfinished interior wood.
- 4. As with all natural wood products, variations in the color and the grain as well as irregularities such as knots and fine cracks may be present. These characteristics are a part of the natural beauty of the wood and should not be considered defective.

# **TROUBLESHOOTING GUIDE**

### WARNING!

- Always unplug the sauna and allow it to cool down before performing any maintenance.
- Repairs to the electrical components of the sauna should only be performed by a qualified service technician.
- Unauthorized repairs or alterations will void the manufacturer's warranty.

### Problem THERE IS NO POWER TO THE SAUNA

1. Check that the Main Power Cable is plugged into the wall outlet.

2. Check that the circuit breaker for the outlet has not tripped. If the breaker has tripped, check that the amperage of the breaker is appropriate for your sauna.

### Solution

Solution

- 3. Check all connections to the Power Supply Box.
- 4. Check for damage to the Main Power Cable; replace, if necessary.
- 5. Replace the Power Supply Box, if necessary.



### Problem ONE HEATER DOES NOT WORK

1. Check that all the connections are tight.

2. Replace the Heater Element.

### Problem NONE OF THE HEATERS WORK

1. Check that all connections are tight.

2. Replace the Heater Circuit Board, if necessary.



# **TROUBLESHOOTING GUIDE (CONT.)**

### Problem THE CONTROL PANEL DOES NOT WORK

1. Check that all the connections are tight.

### Solution

- 2. If the numbers are scrambled or the buttons are unresponsive, replace the Control Panel.
- 3. If the temperature indicator does not work or reads "--" or "EP", replace the Control Panel.



### Problem THE LIGHTS ARE NOT WORKING

1. Check that all the connections are tight.

Solution

- 2. If one light does not work, replace the light fixture.
- 3. If neither the lights nor the radio are working, replace the Power Supply Box.

### Problem THE SPEAKERS ARE NOT WORKING

- 1. Check that the volume is not turned all the way down and that the fader control is set correctly.
- 2. If only one speaker is working, check to see that the sound balance on the stereo is not set all the way to one side.
- 3. Check that all the connections are tight.
- 4. Replace the speaker, if necessary.

### Problem THE COLOR THERAPY LIGHTS ARE NOT WORKING

### Solution

Solution

- 1. Check that all the connections are tight.
- 2. Replace the Color Therapy Light or Control Panel, if necessary.

### REPLACEMENT PARTS

The following page list part numbers specific to your particular sauna model. In the event that you need replacement parts, use this guide to reference the part number. It is important to use only replacement parts specified by the manufacturer. The use of unauthorized substitutes may damage your sauna or cause electrical hazards resulting in injury or fire, and will void the warranty.

## **SAUNA USE DISCLAIMER**

Always consult a health care provider who is knowledgeable in sauna use before using a sauna.

Saunas are powerful devices and monitoring your progress by a professional trained in sauna use is always advisable. Variables of sauna therapy such as health condition of user, duration of sauna therapy, proper hydration, electrolyte and mineral balance and restoration must be properly considered and heeded before proceeding with sauna therapy.

Blue Wave products are not registered with the United States Food and Drug Administration (FDA) as a Medical Devices. Consult your licensed health care provider to see if our saunas are right for you. Blue Wave products and/or its partners, associates, etc. are not liable for the use of Blue Wave products nor any incidental or consequential damages. Under no circumstances shall Blue Wave products or any of its representatives be held liable for injury to any persons or damage to any property. Some states do not allow exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

The FDA requires us to inform you that this product is not intended to diagnose or treat any disease or medical problem and is not a substitute for regular medical care from a licensed health care provider.

## SA1315 3 to 4-PERSON CEDAR ELITE SAUNA WITH CARBON HEATERS


REF.#	DESCRIPTION	PART NUMBER	QTY.
1	FRONT PANEL with GLASS DOOR	SAP2800	1
2	BACK PANEL	SAP2801	1
3	LEFT PANEL	SAP2802	1
4	RIGHT PANEL	SAP2803	1
5	BENCH SEAT (LONG)	SAP2804	1
6 7	ROOF	SAP2805	1 1
	FLOOR 300W HEATER ELEMENT – BACK PANEL	SAP2806 SAP2422	1
8,9 8,9	300W HEATER ELEMENT – BACK PANEL	SAP2422 SAP2422	2 2 2
8,9	300W HEATER ELEMENT – RIGHT PANEL	SAP2422	2
10	ROOF COVER	SAP2807	1
11	BENCH SEAT (SHORT)	SAP2808L or R	2
12	180W HEATER ELEMENT – BACK BENCH HEATER	SAP2419	1
13	FRONT SIDE BENCH SUPPORT	SAP2809	2
14	BENCH SUPPORT HEATER PANEL (LONG)	SAP2810	1
15	THERMOSTAT WIRE	SAP25314	1
16	TOWEL HOOK	SAP2811	1
17	MAIN POWER CABLE	SAP2704	1
18	DOOR HANDLE	SAP2812	1 SET
19	BENCH SUPPORT HEATER PANEL (SHORT)	SAP2813L or R	2
20	OXYGEN IONIZER GLASS DOOR	SAP2409	1 1
21 21	GLASS DOOR GLASS CLIP - METAL	SAP2814 SAP2537	
21	DOOR MAGNET	SAP2537 SAP25371	2 2
22	COLOR THERAPY LIGHT	SAP24101	1
23	DOOR HINGE	SAP24154	2
24	EXTERIOR LIGHT FIXTURE	SAP2605	5
25	MOOD LIGHTING	SAP2815	1 SET
26	MOOD LIGHTING REMOTE	SAP2816	1
26	MOOD LIGHTING REMOTE BATTERY	SAP28161	1
27	VENTILATION COVER	SAP2817	1
28	SPEAKER	SAP2416	2
29	POWER SUPPLY BOX	SAP24072	1
29	POWER SUPPLY RECEPTACLE	SAP24073	1 1
29 29	HEATER CIRCUIT BOARD 25 AMP OVERCURRENT PROTECTOR	SAP2826 SAP2530	1
30	BACKREST	SAP2818	1
31	INTERIOR LIGHT FIXTURE	SAP2604	1
32	2" (50mm) SCREW	SAP2411	17
32	1-1/8" (30mm) SCREW	SAP2411	6
32	3/4" (20mm) SCREW	SAP2411	20
33	80W HEATÉR ELEMENT – SIDE BENCH HEATER	SAP2420	2
34	TOUCH SCREEN CONTROL PANEL FRAME	SAP2820	1
35	TOUCH SCREEN CONTROL PANEL	SAP2821	1
36	BUCKLE	SAP2607	12
37	WOODEN POWER CABLE COVER	SAP3128	1
38	COLOR THERAPY CONTROL PANEL WIRE	SAP2532	1
38	CONTROL PANEL WIRING HARNESS	SAP2822	1
38	CONTROL PANEL FUSE	SAP2823	1
38	CIRCUIT BOARD TO POWER SUPPLY BOX WIRE	SAP2824	1

## SA1322 4 to 5-PERSON CEDAR ELITE SAUNA WITH CARBON HEATERS

REF.#	DESCRIPTION	PART NUMBER	QTY.
1	FRONT PANEL with GLASS DOOR	SAP2830	1
2	BACK PANEL	SAP2831	1
3	LEFT PANEL	SAP2832	1
4	RIGHT PANEL	SAP2833	1
5	BENCH SEAT (LONG)	SAP2834	1
6 7	ROOF	SAP2835	1 1
	FLOOR	SAP2836 SAP2422	
8,9 8,9	300W HEATER ELEMENT – BACK PANEL 300W HEATER ELEMENT – LEFT PANEL	SAP2422 SAP2422	2 2
8,9	300W HEATER ELEMENT – RIGHT PANEL	SAP2422	2
10	ROOF COVER	SAP2837	1
11	BENCH SEAT (SHORT)	SAP2838L or R	2
12	180W HEATER ELEMENT – BACK BENCH HEATER	SAP2419	1
13	FRONT SIDE BENCH SUPPORT	SAP2839	2
14	BENCH SUPPORT HEATER PANEL (LONG)	SAP2840	1
15	THERMOSTAT WIRE	SAP25314	1
16	TOWEL HOOK	SAP2811	1
17	MAIN POWER CABLE	SAP2704	1
18	DOOR HANDLE	SAP2812	1 SET
19	BENCH SUPPORT HEATER PANEL (SHORT)	SAP2841L or R	2
20	OXYGEN IONIZER	SAP2409	1
21	GLASS DOOR	SAP2814	1 2
21 21	GLASS CLIP - METAL DOOR MAGNET	SAP2537	2
22	COLOR THERAPY LIGHT	SAP25371 SAP2410	1
23	DOOR HINGE	SAP2410 SAP24154	2
24	EXTERIOR LIGHT FIXTURE	SAP2605	5
25	MOOD LIGHTING	SAP2815	1 SET
26	MOOD LIGHTING REMOTE	SAP2816	1
26	MOOD LIGHTING REMOTE BATTERY	SAP28161	1
27	VENTILATION COVER	SAP2817	1
28	SPEAKER	SAP2416	2
29	POWER SUPPLY BOX – 12.5A	SAP7022	1
29	POWER SUPPLY RECEPTACLE	SAP24073	1
29	HEATER CIRCUIT BOARD	SAP2826	1
29	25 AMP OVERCURRENT PROTECTOR	SAP2530	1
30	BACKREST INTERIOR LIGHT FIXTURE	SAP2818	1 1
31 32	INTERIOR LIGHT FIXTURE 2" (50mm) SCREW	SAP2604 SAP2411	17
32	1-1/8" (30mm) SCREW	SAP2411 SAP2411	6
32	3/4" (20mm) SCREW	SAP2411	20
33	80W HEATER ELEMENT – SIDE BENCH HEATER	SAP2420	2
34	TOUCH SCREEN CONTROL PANEL FRAME	SAP2820	1
35	TOUCH SCREEN CONTROL PANEL	SAP2821	1
36	BUCKLE	SAP2607	12
37	WOODEN POWER CABLE COVER	SAP3128	1
38	COLOR THERAPY CONTROL PANEL WIRE	SAP2532	1
38	CONTROL PANEL WIRING HARNESS	SAP2822	1
38	CONTROL PANEL FUSE	SAP2823	1
38	CIRCUIT BOARD TO POWER SUPPLY BOX WIRE	SAP2824	1

### SA1315 & SA1322

This drawing is for illustrative purposes only. It will not match your sauna exactly, but will indicate location of similar parts. Illustrations are not to scale.

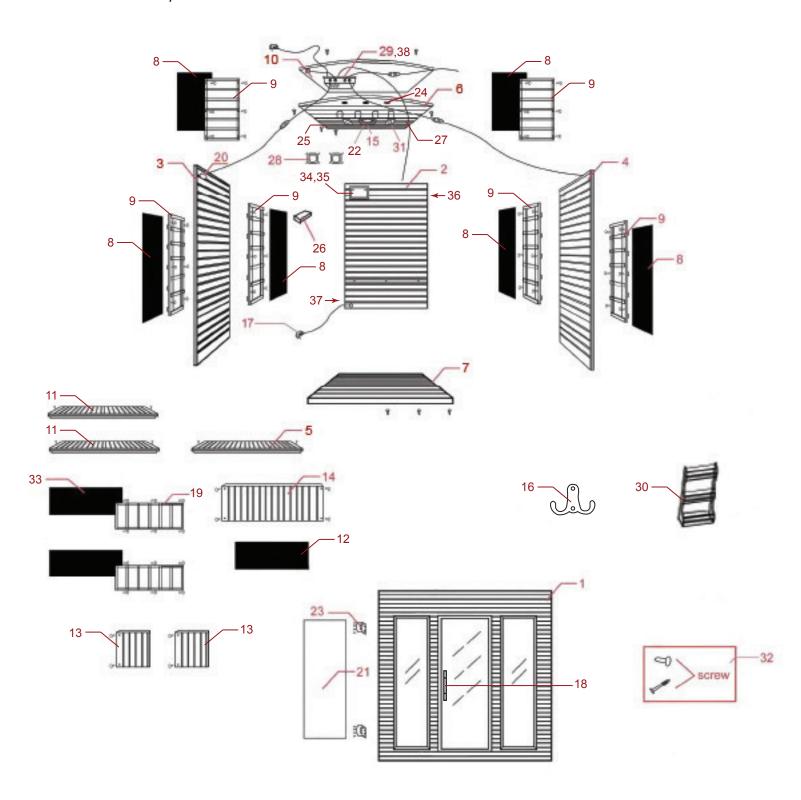

# **SAUNA WARRANTY REGISTRATION CARD**

- 1. This sauna has a 7-Year Limited Warranty against defects in materials and workmanship from date of purchase. To receive the warranty, the card below must be filled out completely and returned within thirty (30) days from date of purchase. This 7-Year Limited Warranty covers the wood structure\*. Heating elements and all electronics are covered by a 5-Year Limited Warranty. The radio/CD player (if included with your sauna) is covered by a limited 1-Year Warranty. The light bulbs and light fixtures are covered for 90 days.
- 2. This product is intended to be utilized for **private, non-commercial use**. Blue Wave Products sauna must be used as directed in the Product Operation Manual. Utilization of **non**-Blue Wave replacement parts or repairs which are not done by or under the direction of Blue Wave Products, Inc. shall also void any warranties/guarantees, expressed or implied.
- 3. This warranty does **not** cover defects or damage due to improper installation, alteration, accident, installation of unauthorized parts or any other event beyond the control of the Blue Wave Products. Defects or damage resulting from misuse, abuse or negligence will void this warranty. This warranty does **not** cover scratching or damage that may result from normal usage.
- 4. Please notify Blue Wave Products in advance of any sauna warranty claim prior to shipping the sauna back. Contact our warranty claim department at warranty@splashnetxpress.com. This warranty becomes valid at time of purchase and terminates either by specified time frame listed above, owner transfer, or relocation.
- 5. This warranty is nontransferable and is expressly limited to the repair or replacement of the defective product. During the warranty period, Blue Wave Products shall repair or replace defective parts at no cost to the purchaser. Shipping charges and insurance are **not** covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation or replacement of the product or components are **not** covered under this warranty.
- 6. If the warranty claim department determines that the item must be returned, it must be returned with freight prepaid and a receipt showing date of purchase, purchase price, and the dealer from which the sauna was purchased. **No warranty claim will be honored without a receipt.**
- 7. Warranty claims will only be resolved with the repair of the current product, or shipment of a replacement product or parts at the sole discretion of Blue Wave Products. NO REFUNDS will be given.
- 8. Blue Wave Products reserves the right to make substitutions to warranty claims if parts are unavailable or obsolete.
- 9. Blue Wave Products shall **not** be liable for loss of use of the product or other consequential or incidental costs, expenses or damages incurred by the consumer of any other use. The user assumes all risk of injury resulting from the use of this product.
- 10. Improper installation, misuse or damages resulting from acts of nature will render this warranty null and void.
- 11. This warranty is in lieu of all other warranties expressed or implied and no responsibility is assumed for future damage due to misuse. This sauna is intended for **INDOOR USE ONLY** outdoor installation of the sauna **WILL VOID THE WARRANTY**. Additional actions that will void the warranty are: Use of lacquer or paints on any part of the sauna, placing sauna on non-approved surface, and outdoor applications.

\*Surface cracks are NOT considered defects in material or workmanship, as they are normal characteristics of all wood. This includes minor cracks due to wood expansion and contraction. Note: since the wood used in construction has been kiln dried, a certain amount of expansion and contraction is expected in the wood within a sauna environment. Also, over time the sauna wood may darken or change color tones. This color change is considered normal aging and is not covered under warranty.

To send in this warranty card: Fill out below, detach and mail to the following address:

BLUE WAVE PRODUCTS 1745 Wallace Ave. Suite B St. Charles, IL 60174 For further warranty information or inquiries, please call 800-759-0977

Detach Here		··-··-·	Detach Here
	SAUNA WARRANTY RE		
Date Purchased:/	<i>J</i>		
Name:			
Phone: ( )		Email:	
Purchased from:			
Item Number:		Purchase Price:	