

1-888-333-1134

www.GoMainAccess.com



Attention: DO NOT return product to store! If you have any damaged or missing components, please contact Main Access customer service for immediate assistance at 1-888-333-1134 or info@MainAccess.com.

All assembly videos available GoMainAccess.com or VouTube



Be sure to check out the wide variety of products that Main Access offers!









Shown with optional #200700T (Smart Choice Ladder) to creat Easy Entry System



Assembly Instructions for Model #200400T Easy Entry Step




# **EASY ENTRY STEP**

## **Model #200400T Assembly Instructions**

\*Can be used with Model #200700T (Smart Choice Ladder) to create The Easy Entry System\*

Easy Entry Step Components	Qty
A1) Upper Step Tread	1
A2) Lower Step Tread	1
B1) Upper Left Side Riser	1
B2) Lower Left Side Riser	1
C1) Upper Right Side Riser	1
C2) Lower Right Side Riser	1
D) Ballast Tray	1
E1) Upper Handrails	2
E2) Lower Handrails	2
F) Top Step Support Brace	1
G) Mid Riser Brace	1
H) Deck Connectors	2
J) Handrail Connectors	2
K) Step Tread Connector	1
Hardware Kit (not shown)	Qty
M) Ballast Sand Bags	3
N) #8 x 1" SS Screws	18
O) #14 x 1-1/4" SS Screws	8
P) #10 x 3/4" SS Screws	9

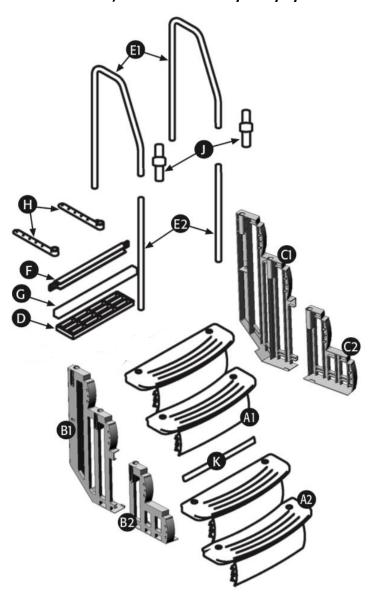

#### **SAFETY INSTRUCTIONS:**

- Install step per manufacturer's instructions.
- Locate Easy Entry Step on a solid base.
- Easy Entry Step is designed for use by one person at a time.
- This step is intended for use as a swimming pool entry/exit only.
- Face the step when entering and exiting the pool.
- No jumping, no diving from the step.
- Do not swim through, behind or around the step.

#### **Tools Required**

Cordless Screwgun/Drill, 1/8" Drill Bit, Standard Phillips Bit, Safety Glasses

SAND NOT INCLUDED. FLAT BOTTOM POOLS ONLY.


**Note:** Before you begin the assembly of your ladder/step please insure you have all components and hardware.

### Model #200400T

**Step 1: Step tread assembly.** 



Step 3: Align lower step tread with tread connector.





Step 4: Tap into place with rubber mallet.



Step 5: Insert (9) #10 3/4 screws in tread connector on hash marks.



Step 6: Align upper riser with mushroom caps on side of step tread.






For Questions Regarding Installation, Please Contact Main Access Customer Service 1-888-333-1134



# **EASY ENTRY STEP**

## **Model #200400T Assmebly Instructions**

Step 7: Snap mushroom caps into place using rubber mallet.





Step 9: Snap mushroom caps into place using rubber mallet



Step 10: Repeat steps 6 through 9 on opposite side.



Step 11: Align ballast tray between all four risers under the step.



Step 12: Snap riser tabs into ballast tray using the rubber mallet.






### Model #200400T

Step 13: Insert top step support brace in between uppers risers.



Step 15: Insert lower handrails into the holes on either side of the lower step tread.





Step 16: Insert the smaller end of the handrail connectors into the top of the lower handrails.



Step 17: Place deck connectors on the upper handrails and place into the holes on the top step.



Step 18: Place upper handrails down over the handrail connectors.





For Questions Regarding Installation, Please Contact Main Access Customer Service 1-888-333-1134



# **EASY ENTRY STEP**

**Model #200400T Assmebly Instructions** 

Step 19: Drill  $#14 \times 11/4$ " screws into handrails through all upper and lower risers.

Step 20: Drill #8 x 1" screws into four dimples on step tread.



Step 21: Pool Installation

Note: Two people are required for installation.

A total weight of approximately 150 lbs. is required to keep the step from moving once in place under water. With the assistance of another person, carefully place the step in the pool. Place the three sealed bags of sand (not included) in ballast bags (M) over the ballast tray (D) to hold the step in place. Walk step back againast the pool wall to prevent swim behind hazards.



Step 22: Deck Mount Installation

With the step in position close to the pool wall, slide the deck connectors (H) intstallation position on either the pool top seat or pool deck. Secure to the deck with two #8 x 1" screws (N). Use a minimum of two screws per deck connector. Secure each deck connector (H) to each upper handrail (E1) by using a single #8 x 1" screw.

\*Optional\* Purchase (3) Anchors (#200888) to weigh down the Easy Entry Step. Sand not inleuded.

The Anchor



#200700T Smart Choice Ladder for outside entry to pool.




For Questions Regarding Installation, Please Contact Main Access Customer Service 1-888-333-1134

#### **Other Recommended Products From Main Access**





Mount it to your step or hang it from the return!

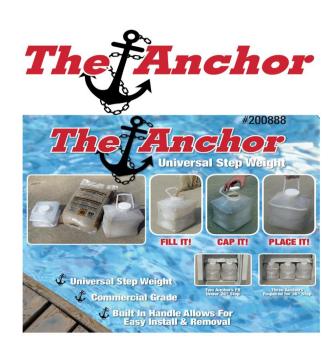

Use them to easily weigh down your pool step!





**Luxury Pool Floats!** 





**Light-up Floating Globes and Furniture!**